Installation

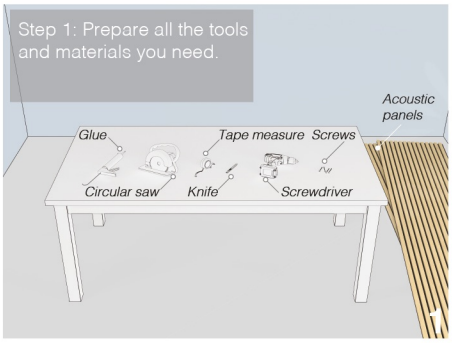

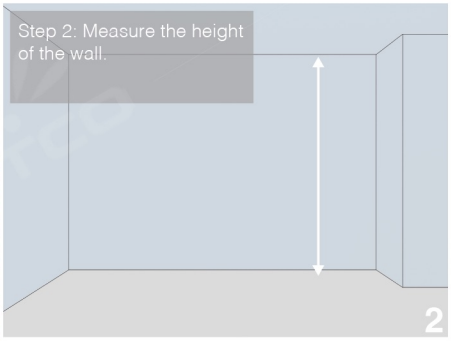

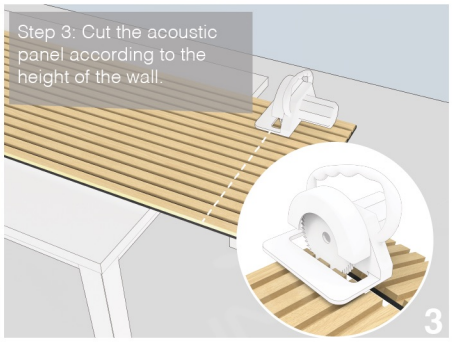

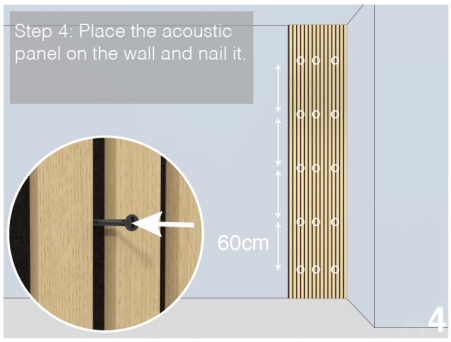

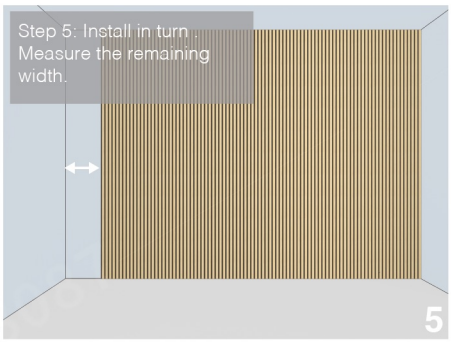

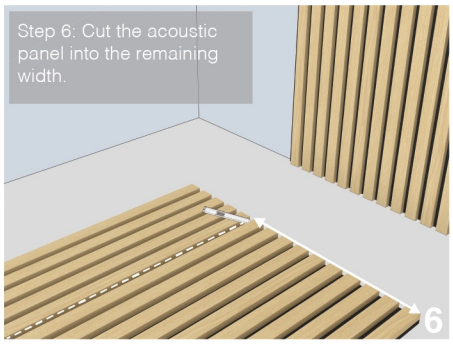

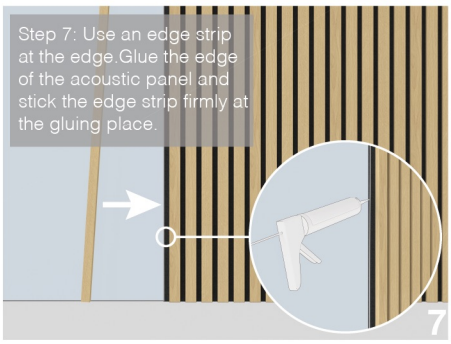

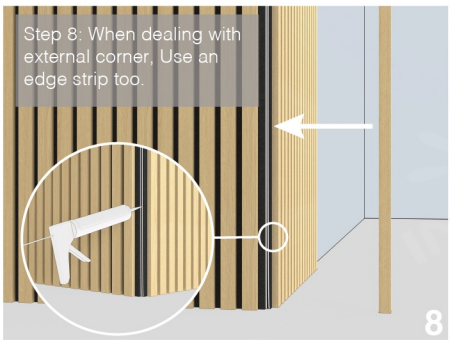

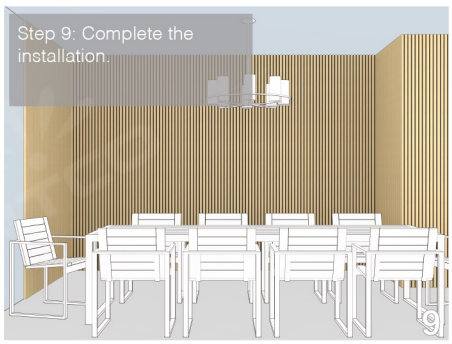

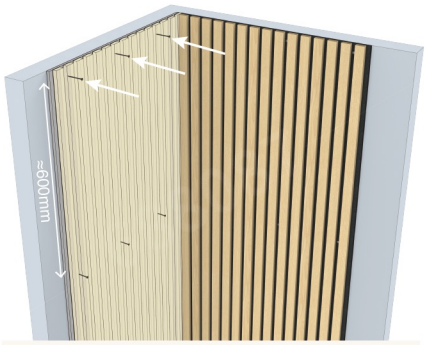

a. Nail acoustic panels directly to the wall.

absorption class: D

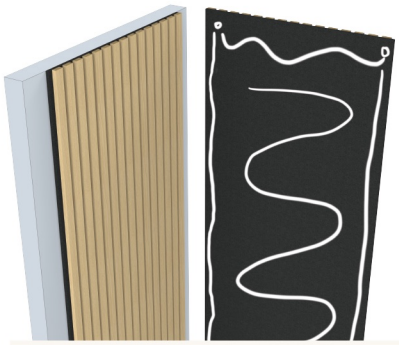

b. Attach acoustic panels to the wall with nail-free glue.

absorption class: D

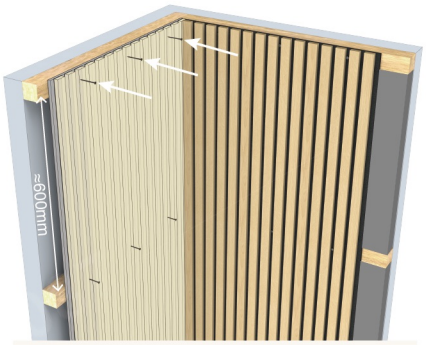

c. Install fibreglass wool or rock wool between the battens.

absorption class: B